Sinclair XF Series Wall Mount Air Handler

Wall Mount

Cooling capacity: 18-36 kBtu/h

Contents:

1 PRODUCT LINEUP.....2

2 NOMENCLATURE.....2

3 SPECIFICATIONS.....3

4 DIMENSIONAL DRAWING.....5

5 ELECTRICAL CHARACTERISTICS.....6

6 AIRFLOW DATA.....8

7 WIRING DIAGRAMS.....10

Standard Features:

- Direct-drive, multi-speed motors allow air volume variation for heating / cooling.
  - Multi-speed ECM motor
- Thermoplastic drain pan with bottom primary and secondary drain connections.
- Built-in filter rack.
- Wall-hanging bracket included.
- Front or bottom return available.
- Optional heating elements in 5kW, 7.5kW, and 10kW.
- All-aluminum coil.
- AHRI listed and ETL listed.
- R454B refrigerant sensor is configured to ensure safe operation.
- R454B refrigerant sensor is factory-installed, more rooms are available for installation.

Sinclair XF Series Wall Mount Air Handler

1 Product lineup

Model	**AHU018145WESNCXF454B** **AHU024145WESNCXF454B** **AHU030175WESNCXF454B** **AHU036175WESNCXF454B**
Power supply	208/230V-1Ph-60Hz
Appearance	

2 Nomenclature

AHU	018	145	W	E	SNC	XF	454B
1	2	3	4	5	6	7	8

Legend		
No.	**Code**	**Remarks**
1	AHU	Line: Air Handler
2	018	Capacity: 018 = 18k BTU; 024 = 24k BTU; 030 = 30k BTU; 036 = 36k BTU
3	145	Cabinet: 145 = 14.5; 175 = 17.5
4	W	Position: Wall Mount
5	E	Fan: ECM
6	SNC	Brand: Sinclair
7	XF	Series: XF
8	454B	Refrigerant: R454B

Sinclair XF Series Wall Mount Air Handler

3 Specifications

ECM

	AHU018145WESNC XF454B	AHU024145WESNC XF454B	AHU030175WESNC XF454B	AHU036175WESNC XF454B
NOMINAL RATING				
Cooling (BTU/h)	18,000	24,000	30,000	36,000
External Static Pressure (in.w.c)	0.6	0.6	0.6	0.6
ELECTRICAL DATA				
Voltage / Phase (60Hz)	208/230V-1Ph	208/230V-1Ph	208/230V-1Ph	208/230V-1Ph
Min. / Max. Voltage (V)	208/230V	208/230V	208/230V	208/230V
Min. Circuit Amps (MCA) (A)	2.4	2.4	3.4	3.4
Max. Overcurrent Protection (MOP) (A)	15	15	15	15
FAN MOTOR				
Motor Type	ECM	ECM	ECM	ECM
Capacitor (uF)	/	/	/	/
Horsepower (HP)	1/3	1/3	1/2	1/2
Rated RPM	650	800	1100	1120
Full Load Amps (FLA) (A)	1.9	1.9	2.7	2.7
Refrigerant Detector				
Number of Detector	1	1	1	1
Type	TC/NDIR	TC/NDIR	TC/NDIR	TC/NDIR
Detection Threshold Limit Value (DTLV)	0.1	0.1	0.1	0.1
Measurement Range	0～100%	0～100%	0～100%	0～100%
Operating temp (°F)	-22～158	-22～158	-22～158	-22～158
FAN BLOWER				
Material	Metal	Metal	Metal	Metal
Type	Centrifugal	Centrifugal	Centrifugal	Centrifugal
Diameter (in.)	10	10	10	10
Height (in.)	6	6	9	9
EVAPORATOR COIL				
Type	Tube & Fin	Tube & Fin	Tube & Fin	Tube & Fin
Tube Material	Aluminum	Aluminum	Aluminum	Aluminum
Tube Size (mm)	7	7	7	7
Sound Pressure Level dBA	49	52	53	54
REFRIGERANT CONNECTION SIZE				
Liquid Line Size (O.D.) (in.)	3/8	3/8	3/8	3/8
Suction Line Size (O.D.) (in.)	3/4	3/4	3/4	3/4

Sinclair XF Series Wall Mount Air Handler

4 Dimensional Drawing

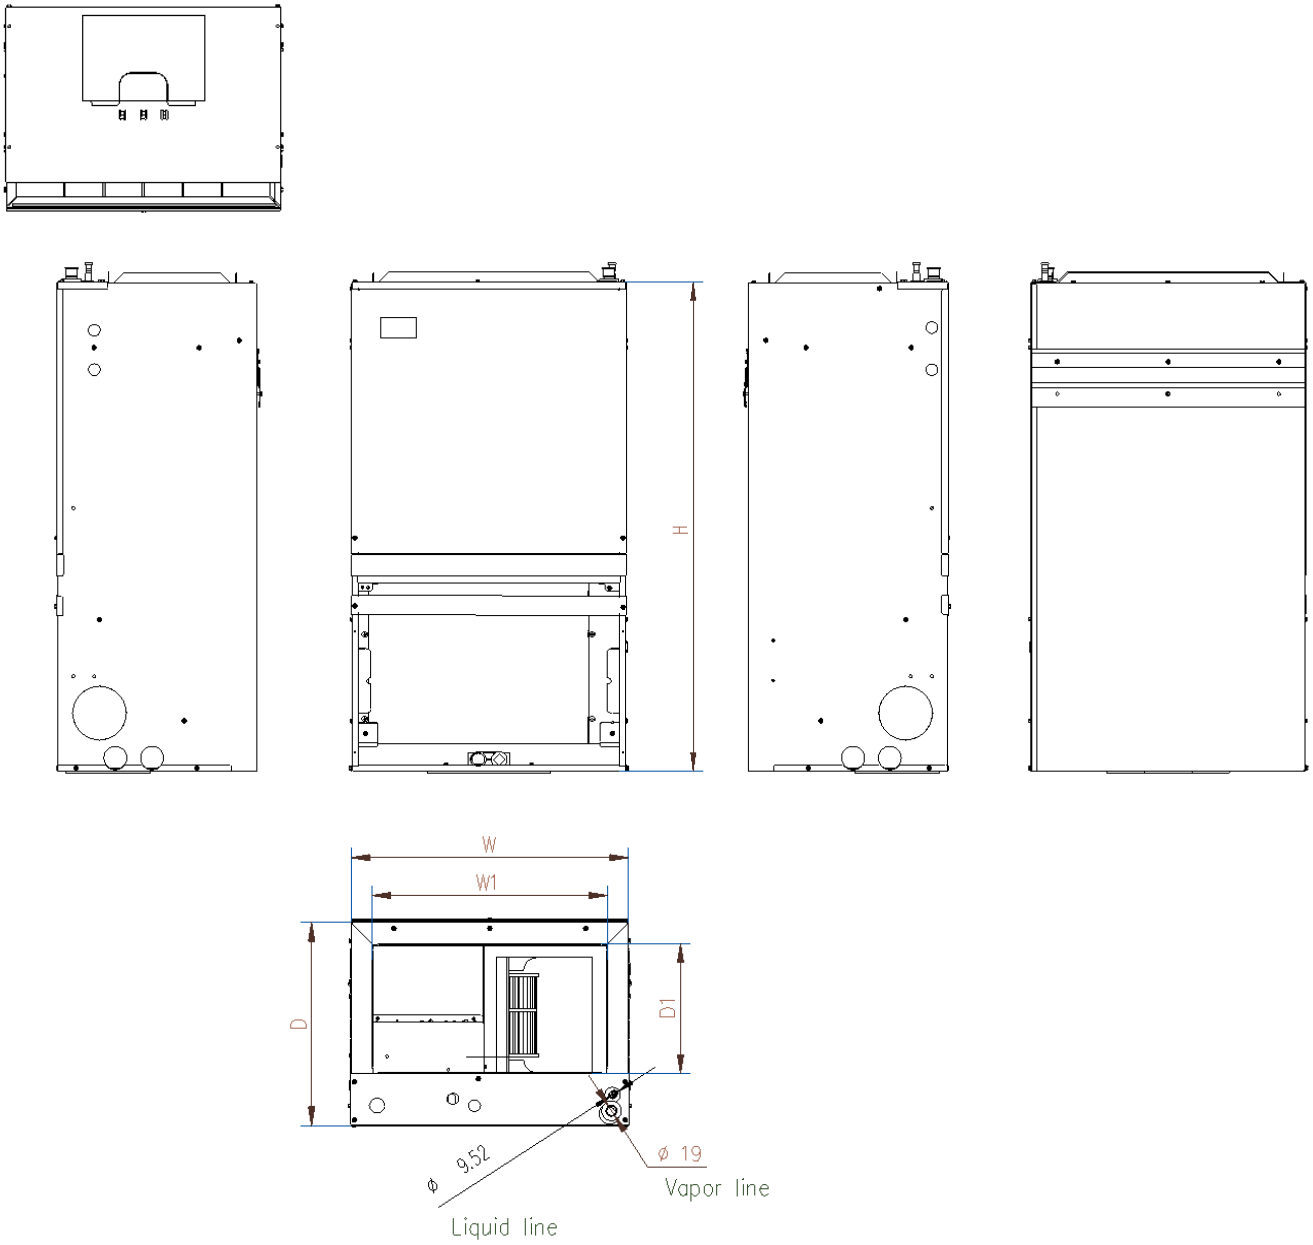

Model Size	Dimensions- (in.) [mm]				
	Height H	Width W	Width W1	Depth D	Depth D1
18K/24K	36-1/2 [928]	20-1/2 [521]	17-2/5 [442]	15 [381]	9-1/2 [242]
30K/36K	39-1/2 [1004]	22 [559]	18-4/5 [478]	19 [483]	9-1/2 [242]

Sinclair XF Series Wall Mount Air Handler

5 Electrical Characteristics

Electric Heater Kit Electrical Data

ECM

Heater Kit Model Used	Air Handler Model	Electric Heat(kW)	Min. Circuit Ampacity		Max. Fuse or Breaker (HACR)Ampacity	
			240V	208V	240V	208V
AHU018145WESNCXF454B	EHK05W	5	28.4	24.9	30.0	30.0
	EHK07W	7.5	41.4	36.2	50.0	50.0
	EHK10W	10	54.5	47.5	60.0	60.0
AHU024145WESNCXF454B	EHK05W	5	28.4	24.9	30.0	30.0
	EHK07W	7.5	41.4	36.2	50.0	50.0
	EHK10W	10	54.5	47.5	60.0	60.0
AHU030175WESNCXF454B	EHK05W	5	29.4	25.9	30.0	30.0
	EHK07W	7.5	42.4	37.2	50.0	50.0
	EHK10W	10	55.5	48.5	60.0	60.0
AHU036175WESNCXF454B	EHK05W	5	29.4	25.9	30.0	30.0
	EHK07W	7.5	42.4	37.2	50.0	50.0
	EHK10W	10	55.5	48.5	60.0	60.0

Sinclair XF Series Wall Mount Air Handler

Electric Heater Power Wiring Diagrams

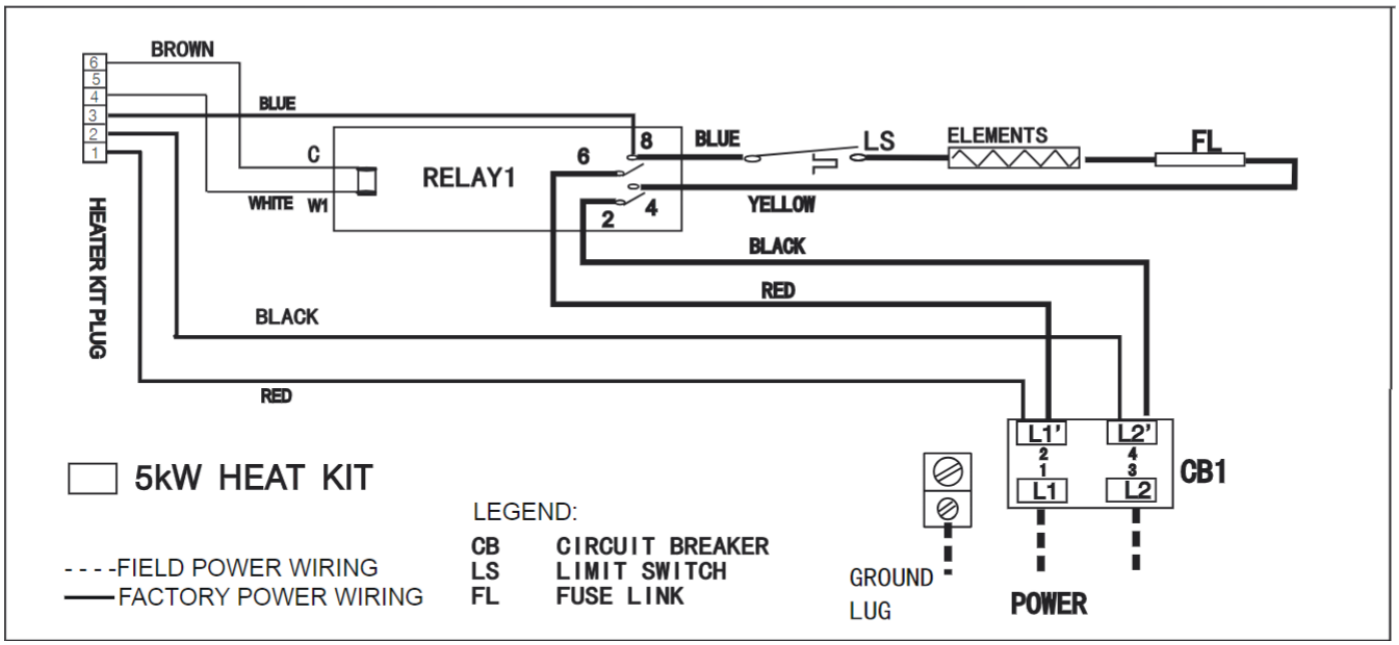

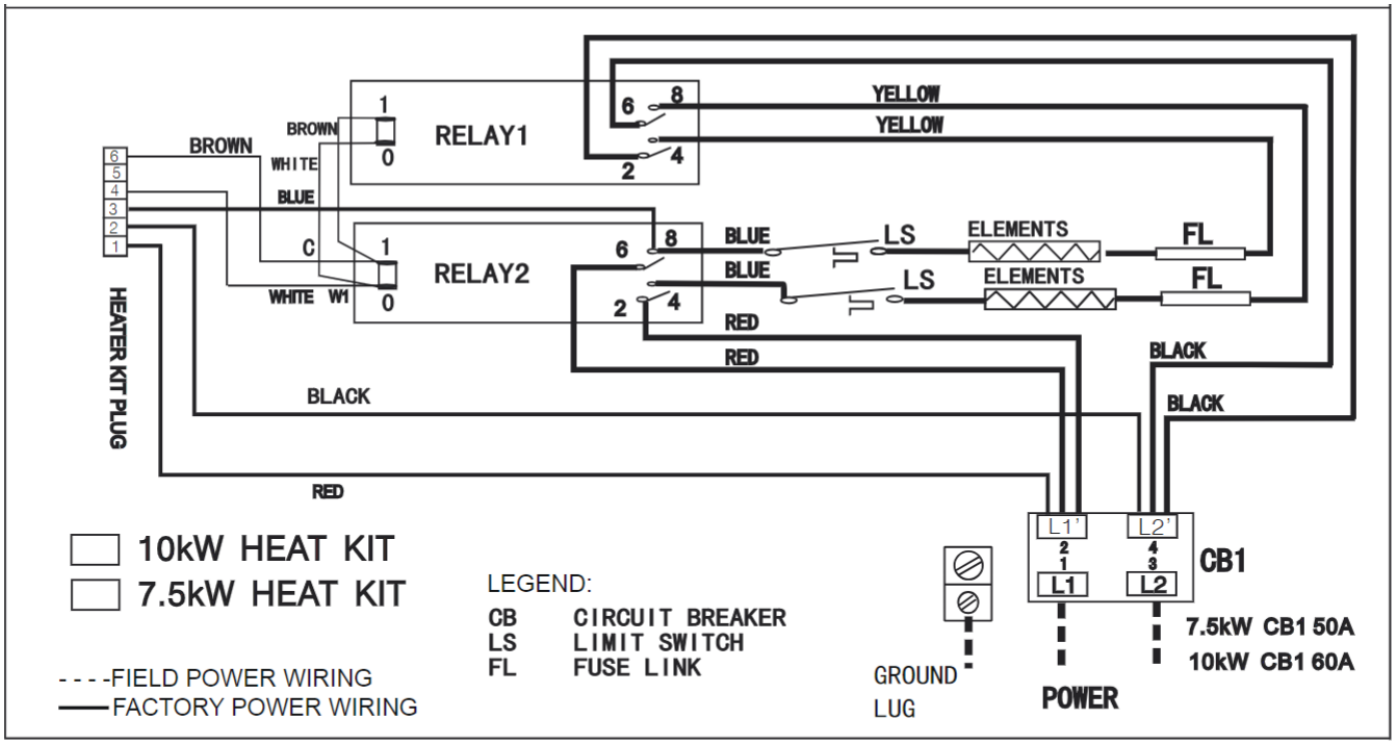

Sinclair XF Series Wall Mount Air Handler

6 Airflow Data

ECM Model	BLOW ER SPEEDS	EXTERNAL STATIC PRESSURE (in.w.c.)								
		0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8
18 (1-1/2)	Tap (1)	584	541	487	441	416	357	359	299	253
	Tap (2)	662	615	582	542	514	467	427	385	351
	Tap (3) (default setting)	710	683	645	619	579	535	490	458	416
	Tap (4)	803	769	742	710	675	642	609	572	534
	Tap (5)	899	871	836	810	789	758	719	689	646
24 (2)	Tap (1)	584	541	487	441	416	357	359	299	253
	Tap (2)	662	615	582	542	514	467	427	385	351
	Tap (3)	710	683	645	619	579	535	490	458	416
	Tap (4)	803	769	742	710	675	642	609	572	534
	Tap (5) (default setting)	899	871	836	810	789	758	719	689	646
30 (2-1/2)	Tap (1)	1063	1012	936	898	853	823	780	740	701
	Tap (2)	1133	1080	1026	991	958	904	858	813	769
	Tap (3) (default setting)	1220	1194	1111	1100	1060	1007	952	910	855
	Tap (4)	1234	1200	1146	1229	1088	1046	1004	951	917
	Tap (5)	1341	1310	1247	1225	1192	1151	1101	1077	1033
36 (3)	Tap (1)	1063	1012	936	898	853	823	780	740	701
	Tap (2)	1133	1080	1026	991	958	904	858	813	769
	Tap (3)	1220	1194	1111	1100	1060	1007	952	910	855
	Tap (4) (default setting)	1234	1200	1146	1229	1088	1046	1004	951	917
	Tap (5)	1341	1310	1247	1225	1192	1151	1101	1077	1033

--- NOTES: Shaded boxes represent airflow outside the required 300-450 CFM/ton.

1. Airflow based on dry coil at 230V with no electric heat and factory-approved filter. FMA5X airflow at 208V is approximately the same as 230V because the multi-tap ECM motor is a constant torque with no drop off regardless of motor operating speed.

2. Airflow is equivalent for front or bottom return configurations.

7 Wiring Diagram

ECM

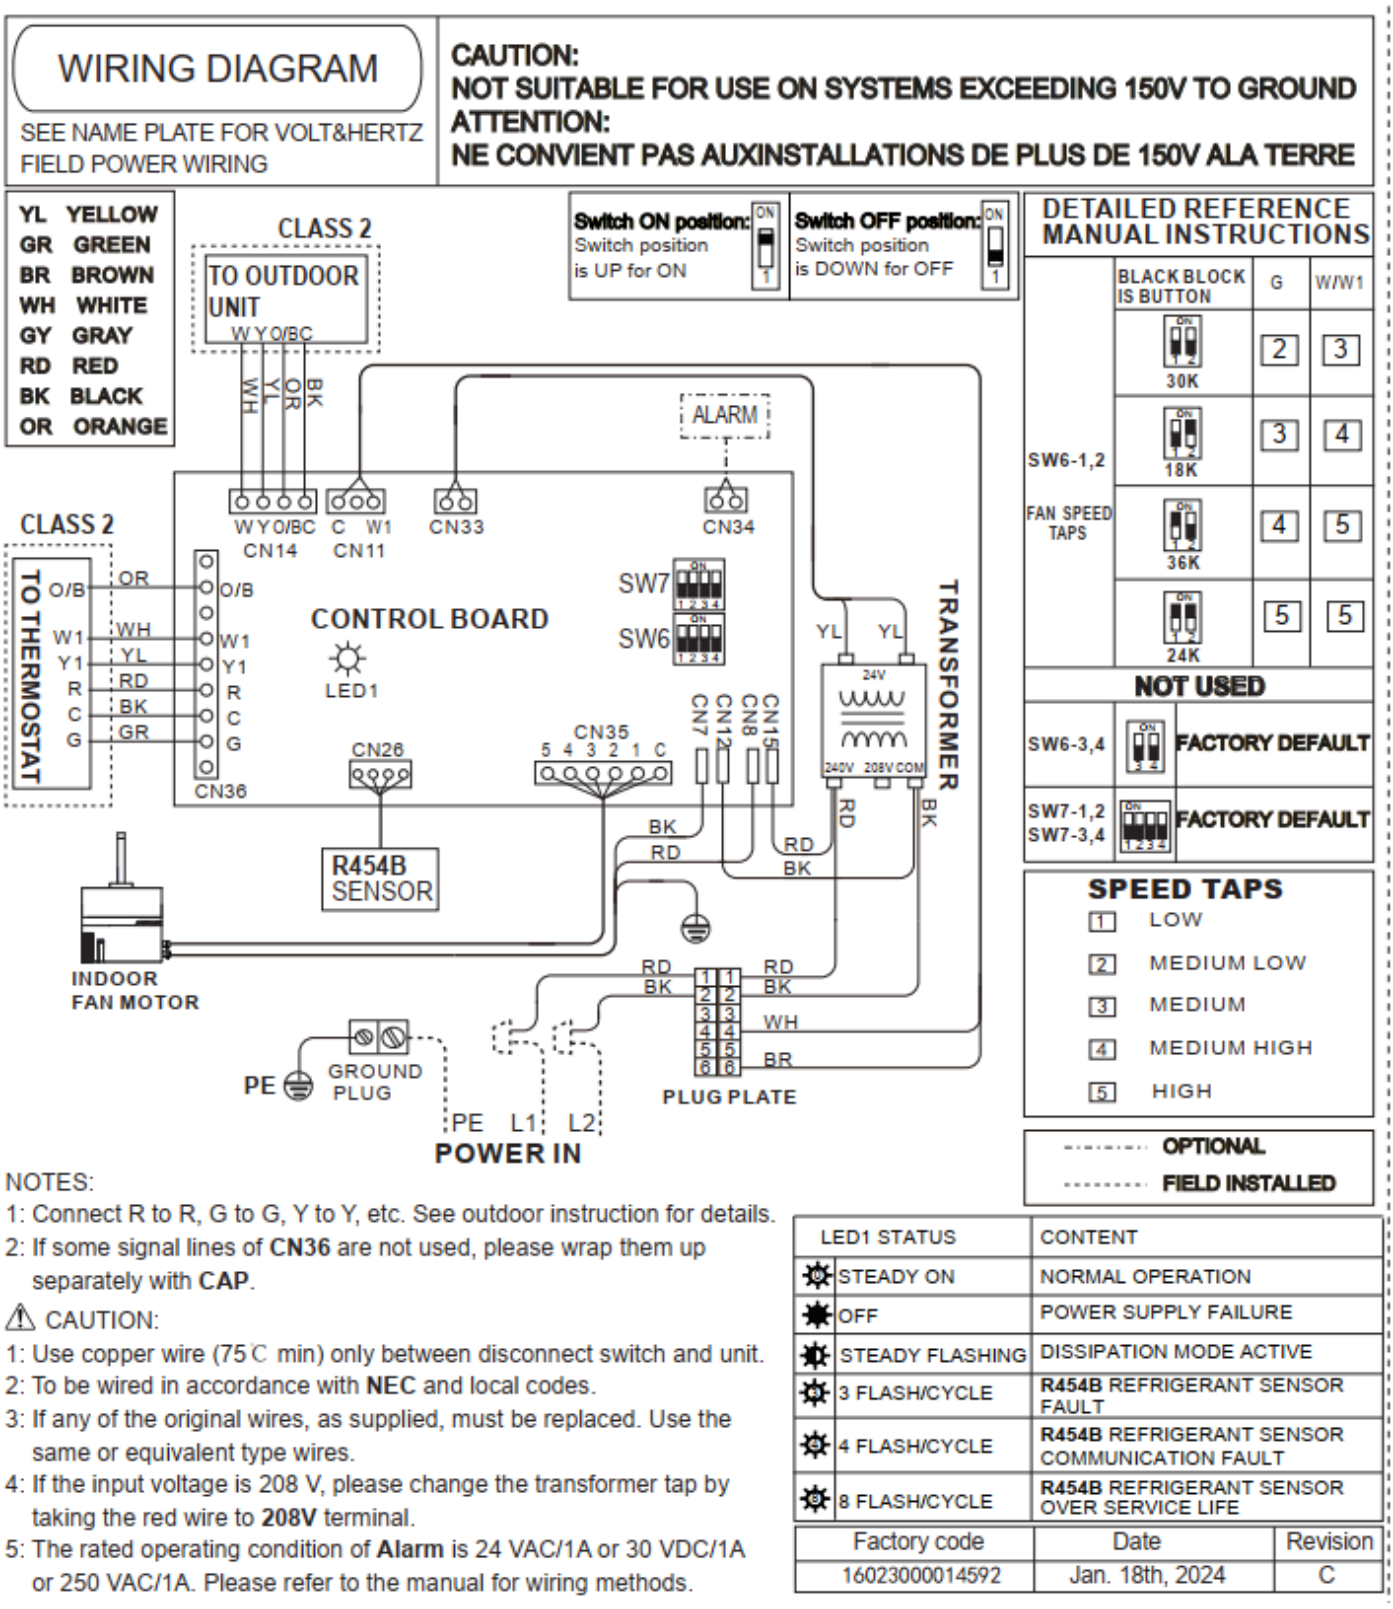

NOTES:

1: Connect R to R, G to G, Y to Y, etc. See outdoor instruction for details.
2: If some signal lines of **CN36** are not used, please wrap them up separately with **CAP**.

⚠ CAUTION:

1: Use copper wire (75℃ min) only between disconnect switch and unit.
2: To be wired in accordance with **NEC** and local codes.
3: If any of the original wires, as supplied, must be replaced. Use the same or equivalent type wires.
4: If the input voltage is 208 V, please change the transformer tap by taking the red wire to **208V** terminal.
5: The rated operating condition of **Alarm** is 24 VAC/1A or 30 VDC/1A or 250 VAC/1A. Please refer to the manual for wiring methods.

LED1 STATUS	CONTENT
STEADY ON	NORMAL OPERATION
OFF	POWER SUPPLY FAILURE
STEADY FLASHING	DISSIPATION MODE ACTIVE
3 FLASH/CYCLE	**R454B** REFRIGERANT SENSOR FAULT
4 FLASH/CYCLE	**R454B** REFRIGERANT SENSOR COMMUNICATION FAULT
8 FLASH/CYCLE	**R454B** REFRIGERANT SENSOR OVER SERVICE LIFE

Factory code	Date	Revision
16023000014592	Jan. 18th, 2024	C